












A guide to your Timber Bed Frame

What comes with your queen timber bed frame


Box 1/4

7x	Legs		
6x	Frame hand screws		
2x	Long headboard hand screws		
2x	Short headboard hand screws		
8x	Washers		
2x	Hammer nuts		
7x	Thin felt pads		
2x	Thick felt pads		
20x	Slats		


What comes with your queen timber bed frame

Box 2/4

1x Top rail



1x Short middle rail




1x Bottom rail




What comes with your queen timber bed frame

Box 3/4

1x Left rail



1x Right rail




1x Long middle rail




Box 4/4

1x Headboard

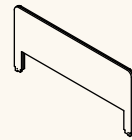

Before you begin, make sure to choose a spot for your timber bed frame against a wall.

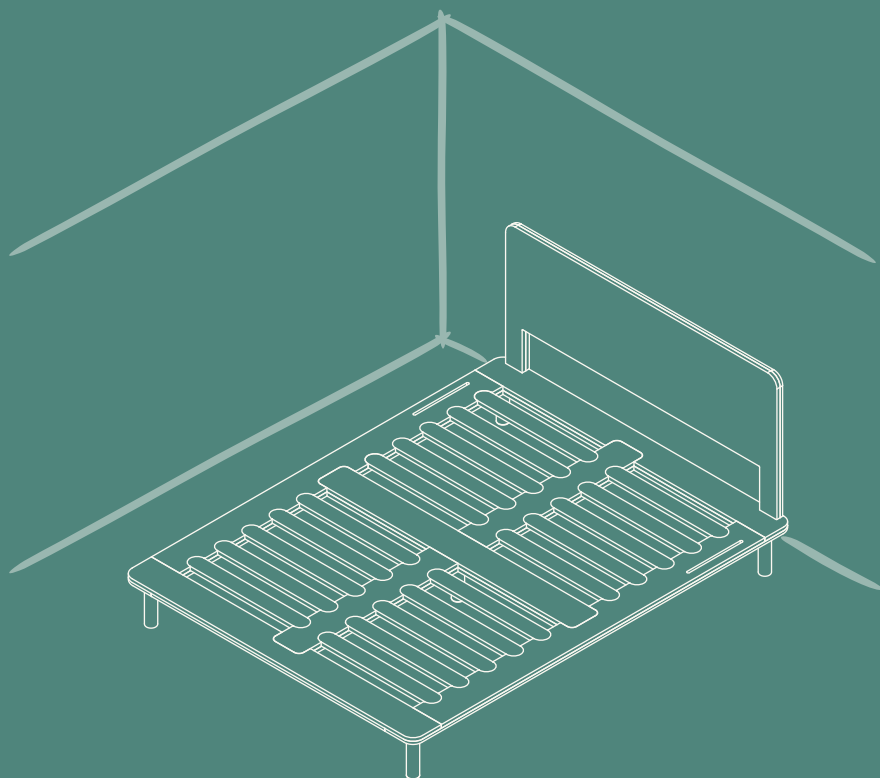


Please contact our customer experience team if you cannot place your bed frame against a wall.

1.

Line up middle rails (A-A) and screw 1x leg in to secure together. Set aside.


Optional: Stick thin felt pads onto underside of legs. We recommend this for timber or hard floors.

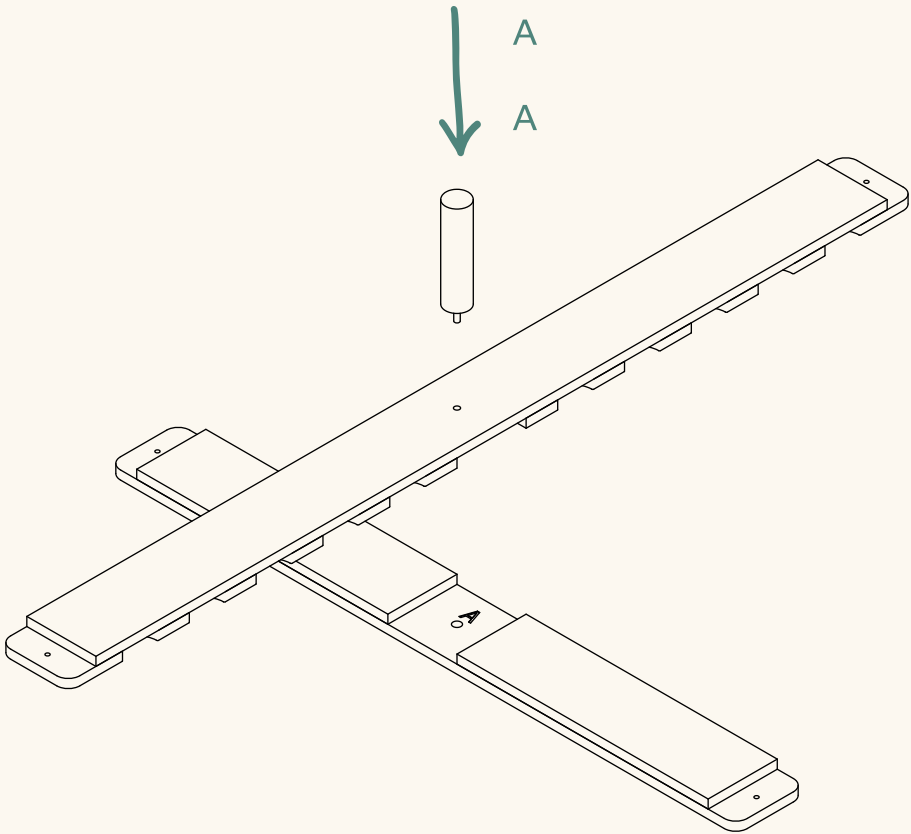

2.

Line up top (B-C), bottom (D-E), and side rails (B-D, C-E) together.


Match the letters and have the top rail closest to the wall.

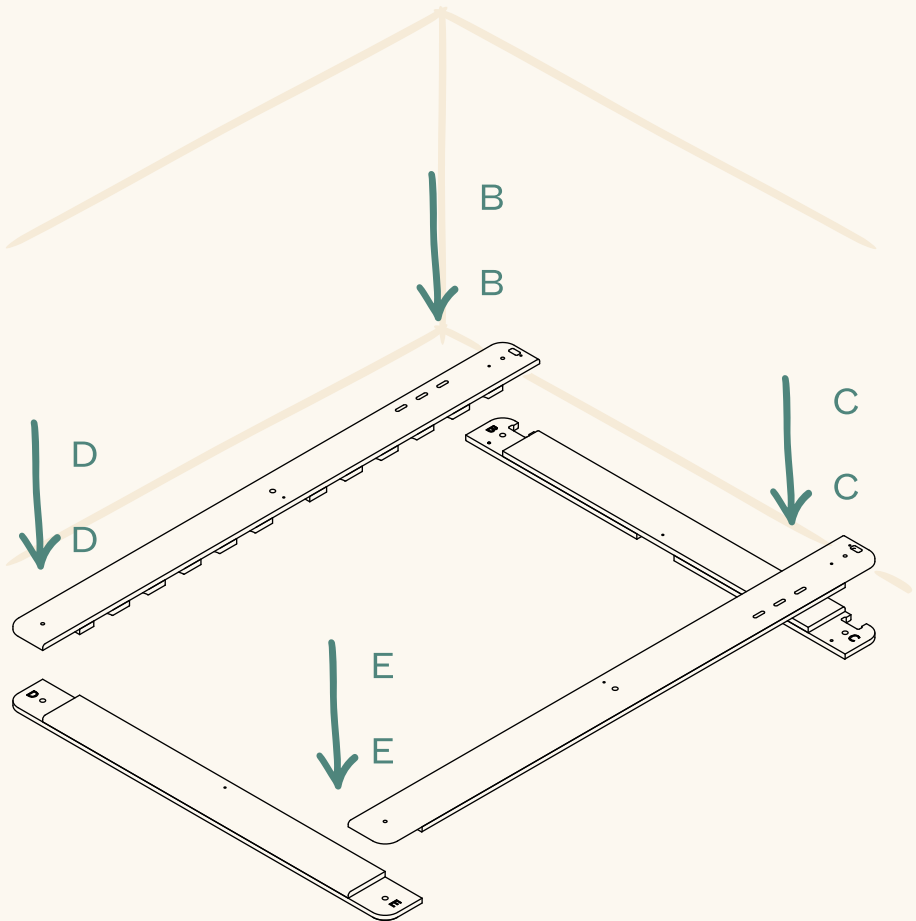

3.


Screw 6x legs into corners and sides to secure together.

Optional: Stick thin felt pads onto underside of legs. We recommend this for timber or hard floors.

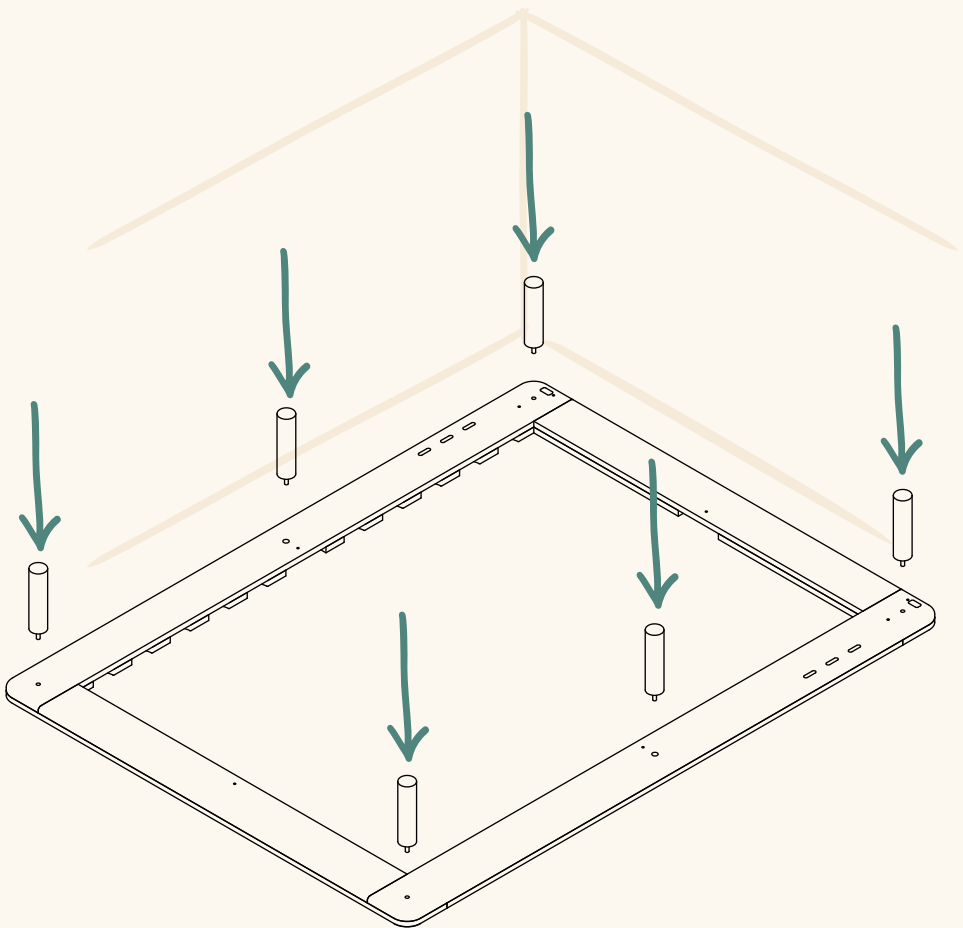


4.

Flip frame upright.

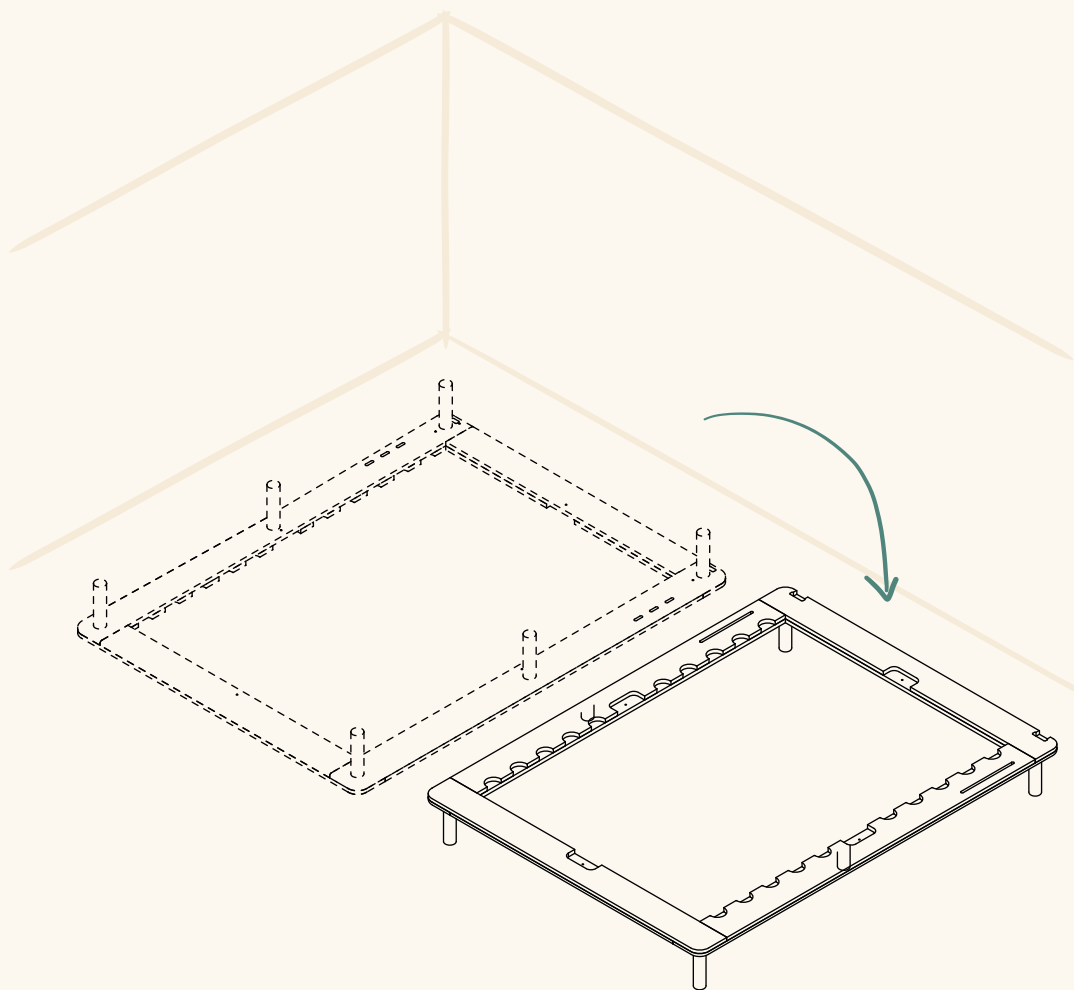


5.

Place previously assembled section onto frame.

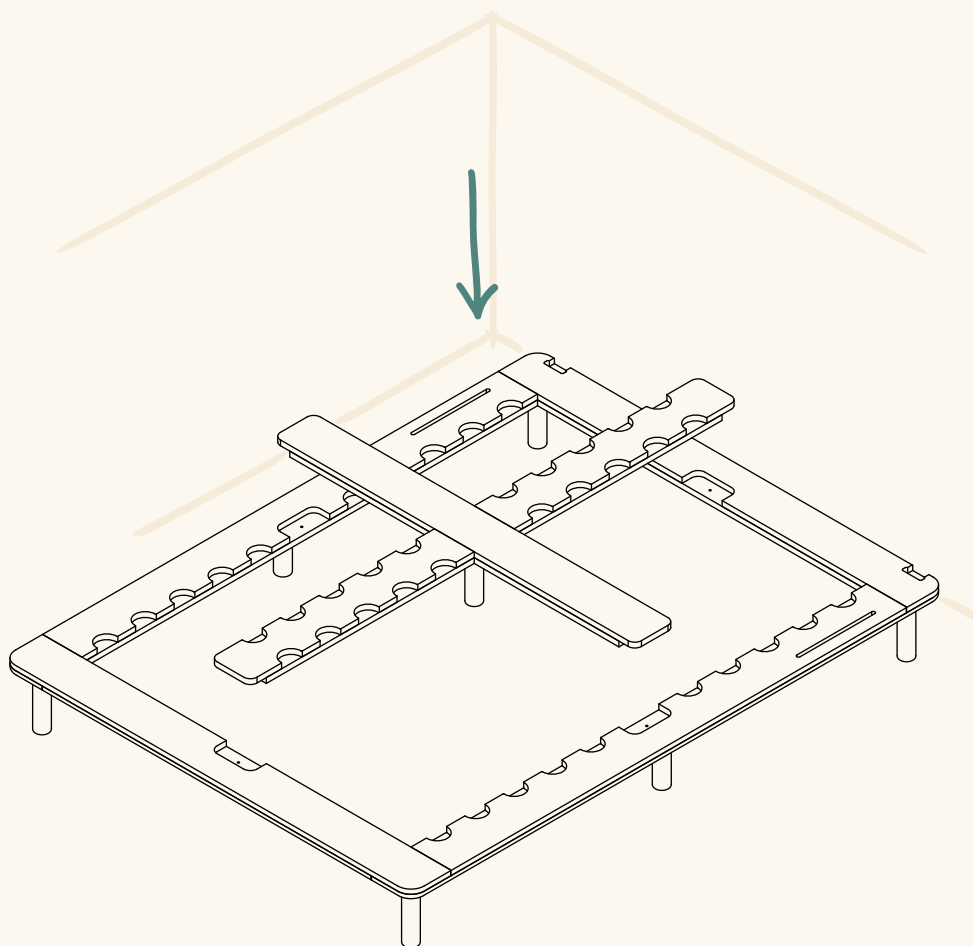


6.

Secure together using 6x frame hand screws with washers.

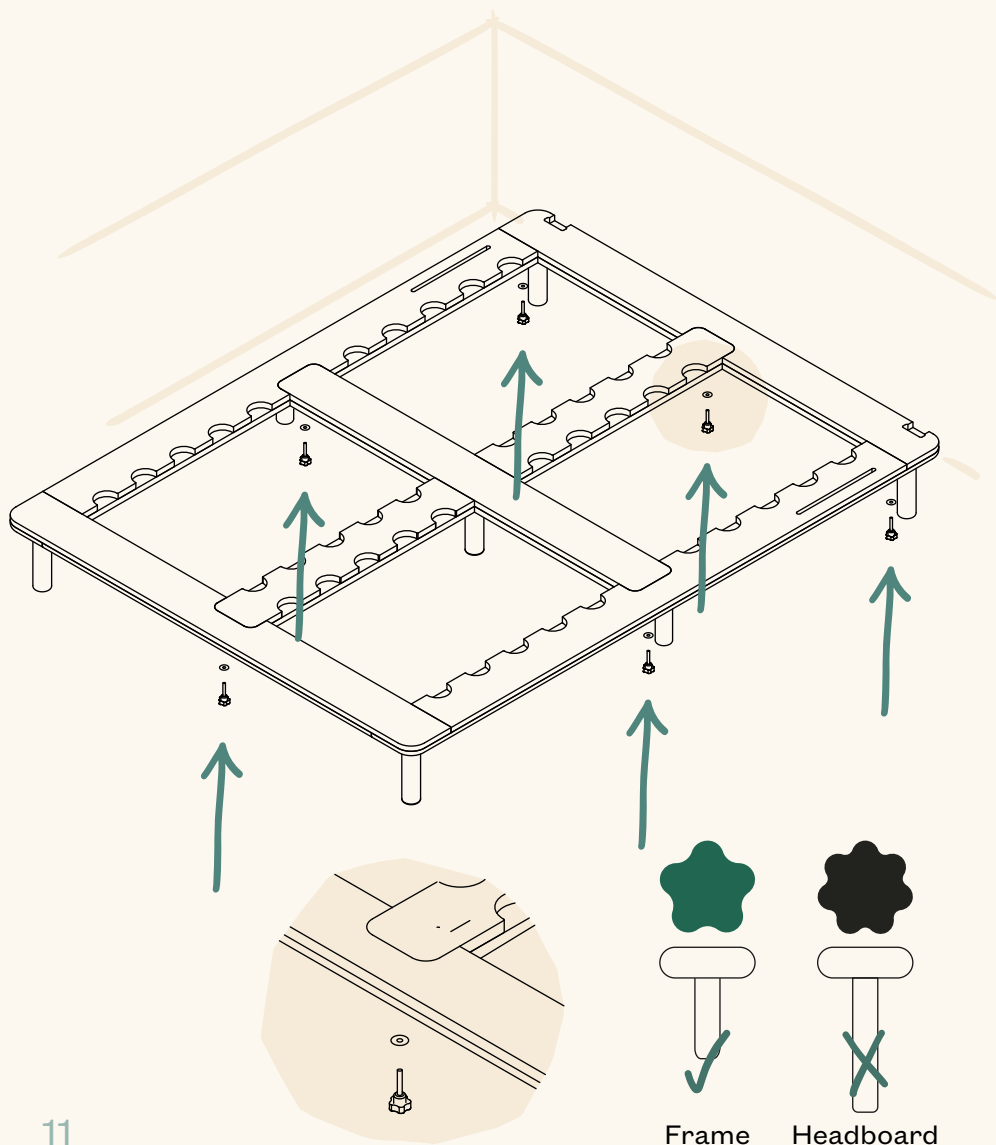



7.

Place headboard onto frame.

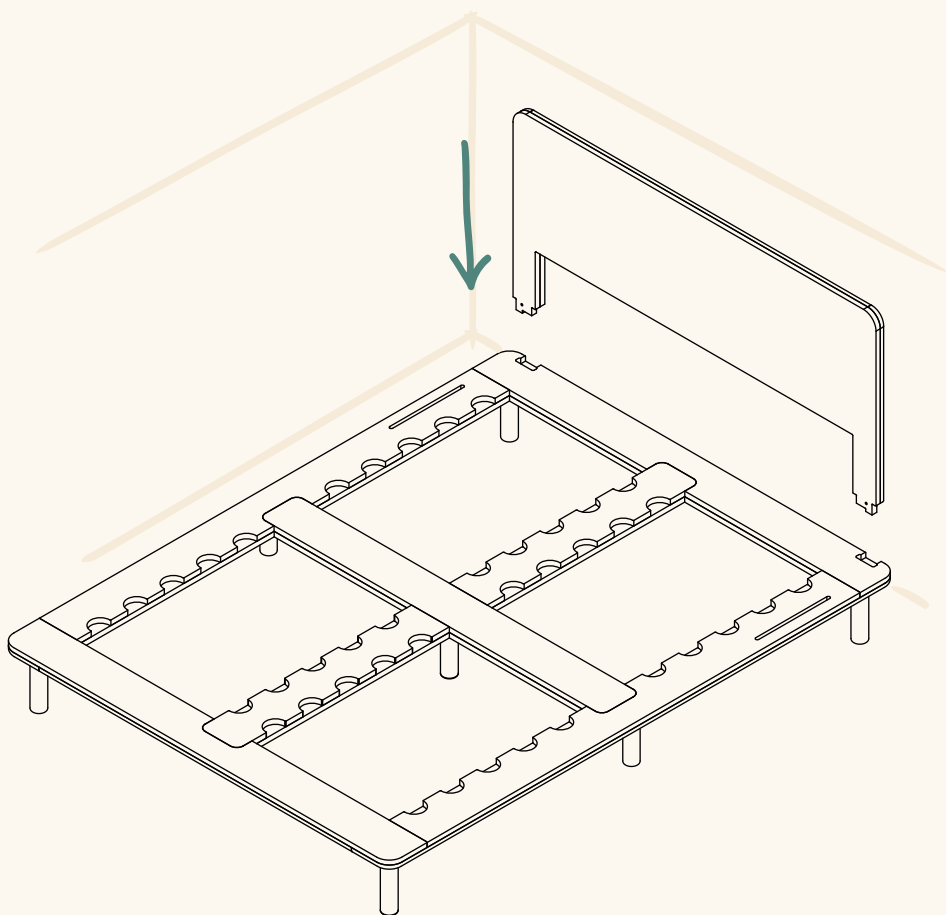

8.

Secure back of headboard using 2x short headboard hand screws.

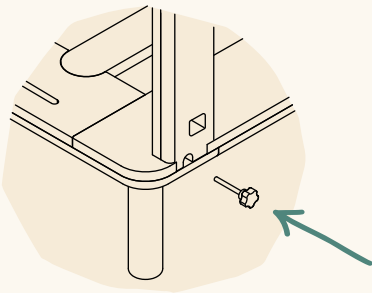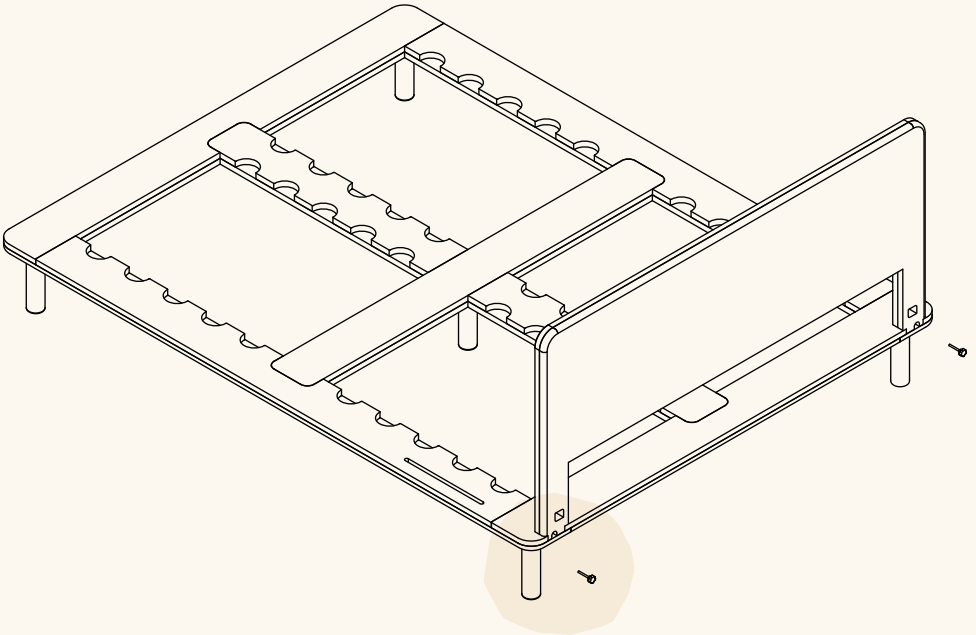

Frame





Short
headboard



Long
headboard



9.

Insert 2x hammer nuts into square cutouts at the back of the headboard. Ensure holes align vertically.

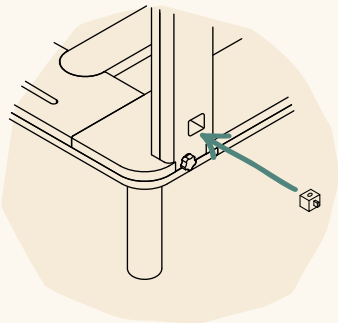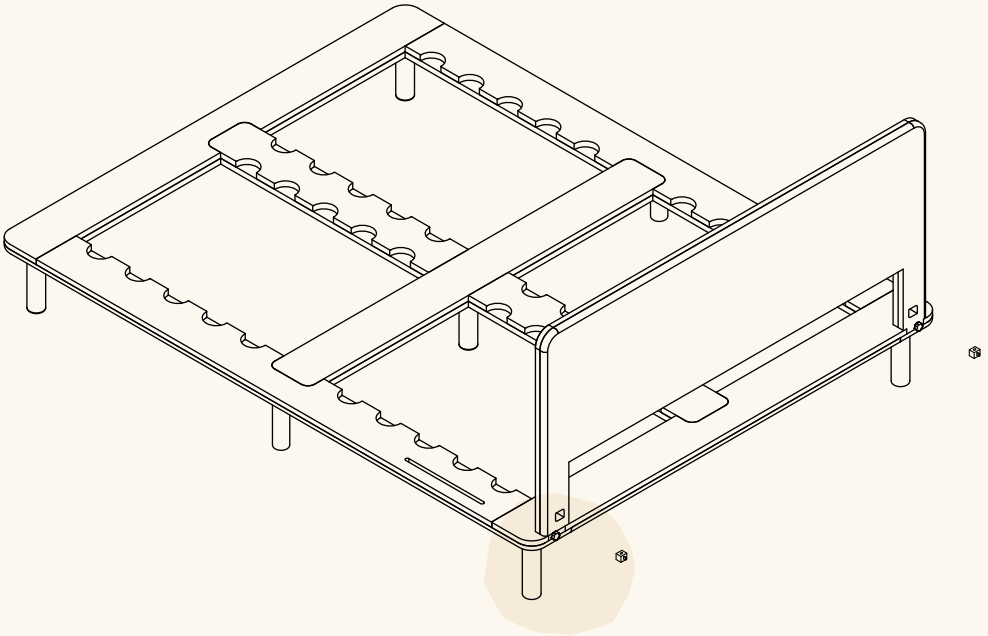

10.

Insert 2x long headboard hand screws with washers through base & hammer nut holes. Tighten to secure.

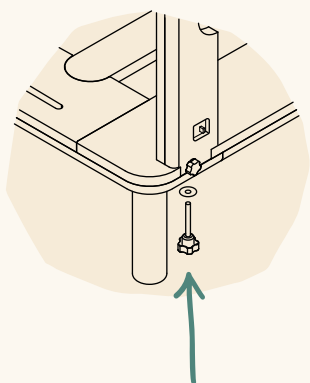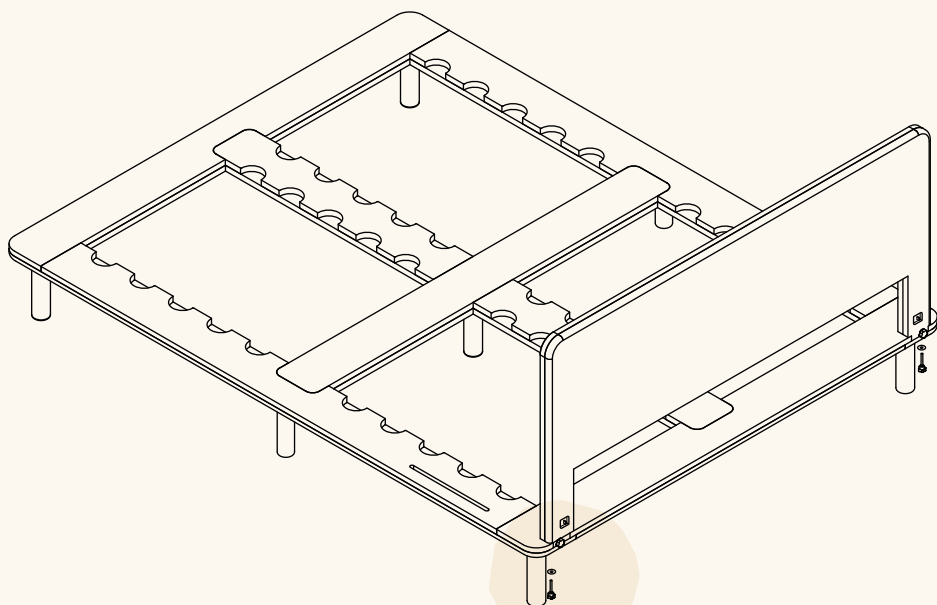

Frame





Short
headboard



Long
headboard

11.


Stick 2x thick felt pads to the back side of the headboard to protect your wall.

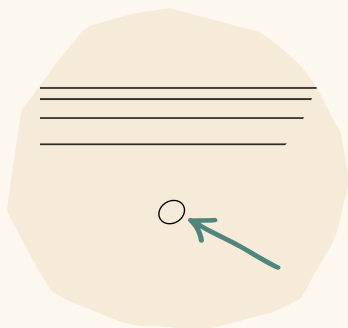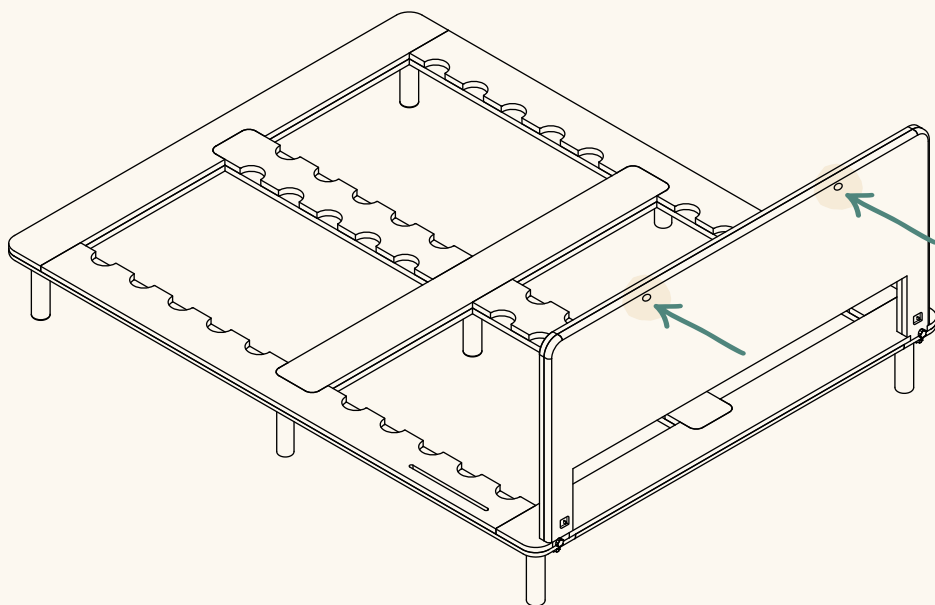

12.

Place slats on and enjoy!

Caution: Avoid standing on slats.

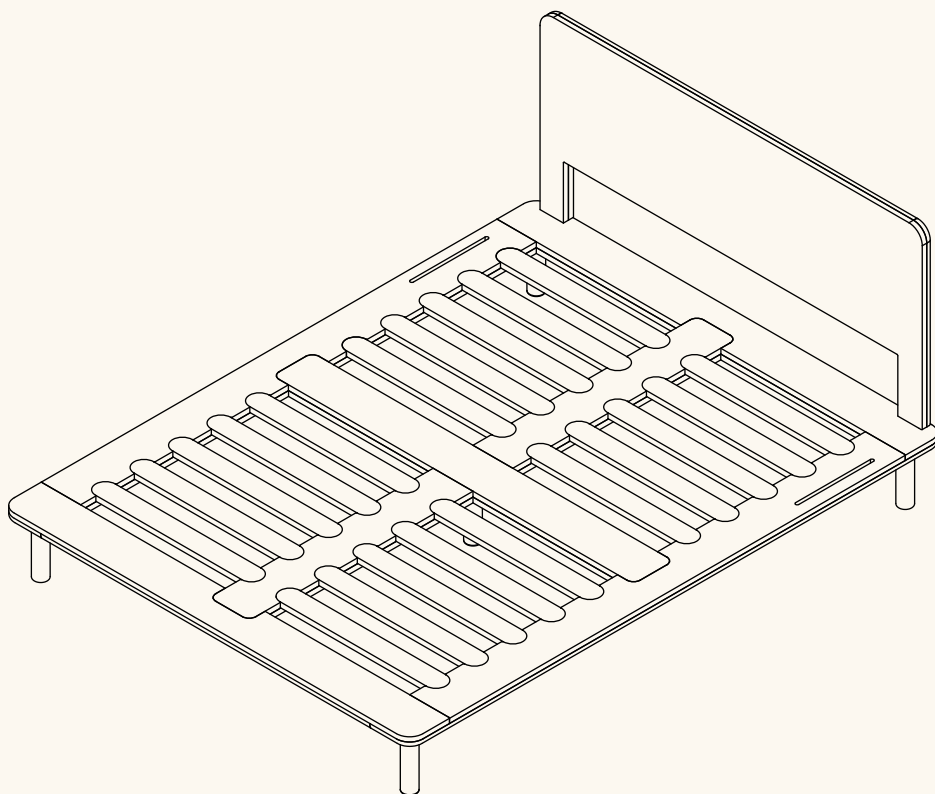

Thoughtful everyday.